


**METTLER TOLEDO**

**Weighing terminal IND439check**

**Weighing terminal IND439xx check**

**Compact scales BBA439check**

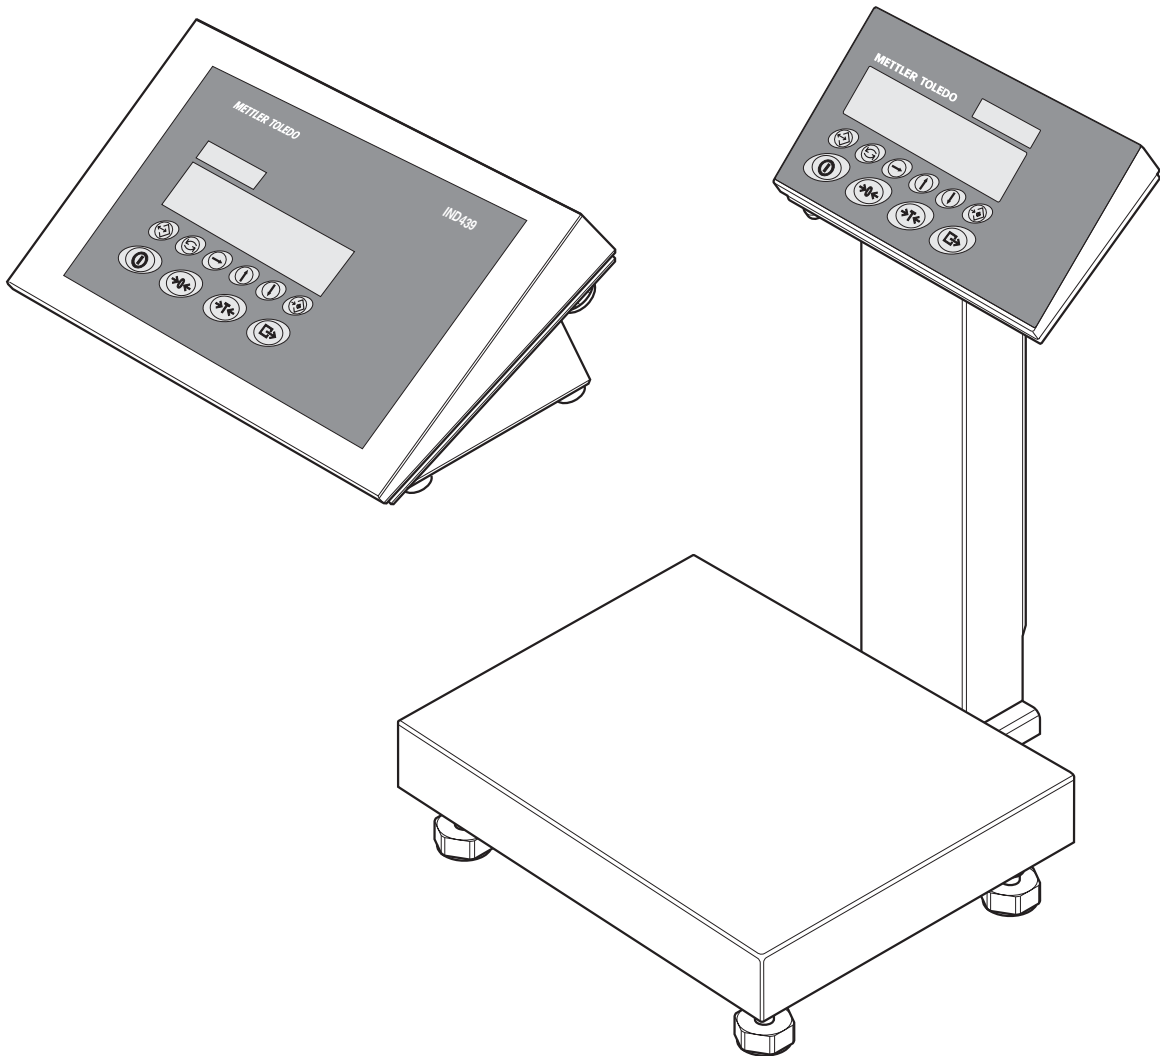



Congratulations on choosing the quality and precision of METTLER TOLEDO. Proper use according to this Operating Manual and regular calibration and maintenance by our factory-trained service team ensures dependable and accurate operation, protecting your investment. Contact us about a ServiceXXL agreement tailored to your needs and budget.

We invite you to register your product at [www.mt.com/productregistration](http://www.mt.com/productregistration) so we can contact you about enhancements, updates and important notifications concerning your product.

## Table of contents

	Page
<b>1 Introduction .....</b>	<b>5</b>
1.1 Safety instructions for the explosion protected weighing terminal IND439xx check .....	5
1.2 Safety instructions for non-explosion-protected devices .....	6
1.3 Disposal .....	7
1.4 Use in hygienically sensitive areas .....	7
1.5 Description .....	8
1.6 Commissioning .....	12
<b>2 Operation .....</b>	<b>15</b>
2.1 Switching on and off .....	15
2.2 Zeroing / Zero point correction .....	15
2.3 Simple weighing .....	15
2.4 Weighing with tare .....	16
2.5 Displaying the capacity available .....	17
2.6 Printing results .....	17
2.7 Cleaning .....	17
2.8 Testing of weighing terminal and scale/display of the ID code (only for weighing terminals with IDNet interface) .....	18
<b>3 Check weighing .....</b>	<b>19</b>
3.1 Specifying target values .....	19
3.2 Check weighing .....	23
3.3 Check weighing with "quick start" .....	24
3.4 Check weighing to zero .....	24
3.5 Terminating check weighing .....	24
<b>4 Settings in the menu .....</b>	<b>25</b>
4.1 Operating the menu .....	25
4.2 Overview .....	27
4.3 Scale settings (SCALE) – analog .....	31
4.4 Scale settings (SCALE) – IDNet .....	33
4.5 Application settings (APPLICATION) .....	35
4.6 Terminal settings (TERMINAL) .....	37
4.7 Configuring interfaces (COMMUNICATION) .....	38
4.8 Diagnosis and printing out of the menu settings (DIAGNOS) .....	43
<b>5 Interface description .....</b>	<b>44</b>
5.1 SICS interface commands .....	44
5.2 TOLEDO Continuous mode .....	46
5.3 MMR interface commands .....	48
<b>6 Event and error messages .....</b>	<b>51</b>

<b>7</b>	<b>Technical data and accessories .....</b>	<b>53</b>
7.1	Technical data .....	53
7.2	Accessories .....	57
<b>8</b>	<b>Appendix .....</b>	<b>59</b>
8.1	Safety checks .....	59
8.2	Tests for utilisation in hygienically sensitive areas .....	59
8.3	Working to GMP (Good Manufacturing Practice) .....	60
8.4	Tables of geo values .....	60
8.5	FCC .....	63
<b>9</b>	<b>Index .....</b>	<b>64</b>

# 1 Introduction

## 1.1 Safety instructions for the explosion protected weighing terminal IND439xx check



The device fulfills Device category 3 and is approved for operation in Zone 2 (gases) and Zone 22 (dusts) hazardous areas.

There is an increased risk of injury and damage when used in hazardous areas.

Special care must be taken when working in such hazardous areas. The code of practice is oriented to the "Safe Distribution" concept drawn up by METTLER TOLEDO.

### Competence

- ▲ The device, accompanying weighing platforms and accessories may only be installed, maintained and repaired by authorized METTLER TOLEDO service personnel.
- ▲ The mains connection may only be connected or disconnected by the owner's electrician.

### Ex approval

- ▲ For the exact specification please refer to the statement of conformity.
- ▲ No modifications may be made to the terminal and no repair work may be performed on the modules. Any weighing platform or system modules that are used must comply with the specifications contained in the installation instructions. Non-compliant equipment jeopardizes the safety of the system, cancels the Ex approval and renders any warranty or product liability claims null and void.
- ▲ The cable glands must be tightened so that a strain relief of  $\geq 20$  N per mm cable diameter is ensured.
- ▲ When connecting external devices, always observe the maximum permissible connected loads, refer to the installation instructions. It must be ensured that no voltages are fed into the device than it itself provides. The interface parameters have to fulfil the standard.
- ▲ Peripheral devices without an Ex approval may only be operating in non-hazardous areas. It must be ensured that no voltages are fed into the device than it itself provides. In addition the maximum permissible connected loads have to be observed, refer to the installation instructions. The interface parameters have to fulfil the standard.
- ▲ The safety of the weighing system is only guaranteed when the weighing system is operated, installed and maintained in accordance with the respective instructions.


- Ex approval**
- ▲ Also comply with the following:
    - the instructions for the system modules,
    - the regulations and standards in the respective country,
    - the statutory requirement for electrical equipment installed in hazardous areas in the respective country,
    - all instructions related to safety issued by the owner.
  - ▲ Before initial start-up and following service work, check the explosion protected weighing system for the proper condition of all safety-related parts.
- Operation**
- ▲ Prevent the build-up of static electricity. Therefore:
    - always wear suitable working clothes when operating or performing service work on the system,
    - do not rub or wipe off the keyboard surface with a dry cloth or glove.
  - ▲ Do not use protective hoods.
  - ▲ Prevent damage to the weighing terminal. Hairline cracks in the keyboard membrane are also considered damage.
  - ▲ If the weighing terminal, accompanying weighing platforms or accessories are damaged:
    - Switch off weighing terminal.
    - Separate the weighing terminal from the mains in accordance with the applicable regulations.
    - Secure the weighing terminal against accidental start-up.
  - ▲ Always charge the storage batteries in a safe zone.
  - ▲ Ensure that the supply voltage at the installation site amounts to 230 V.

## 1.2 Safety instructions for non-explosion-protected devices



- ▲ Do not use the device in an hazardous environment!  
Special devices are available in our range of products for hazardous environments.
- ▲ Ensure that the power socket outlet for the device is earthed and easily accessible, so that it can be de-energized rapidly in emergencies.
- ▲ Ensure that the supply voltage at the installation site lies within in the range of 100 V to 240 V.
- ▲ The safety of the device cannot be ensured if it is not operated in accordance with these operating instructions.
- ▲ Only authorized personnel may open the device.
- ▲ Check the power cable regularly for damage. If it is damaged, disconnect the device immediately from the power supply.
- ▲ Ensure that there is a space of at least 3 cm at the rear in order to prevent the power cable from being bent too strongly.

### 1.3 Disposal

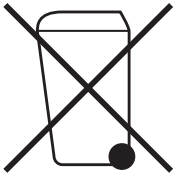

In conformance with the European Directive 2002/96 EC on Waste Electrical and Electronic Equipment (WEEE) this device may not be disposed of with domestic waste. This also applies to countries outside the EU, per their specific requirements.

→ Please dispose of this product in accordance with local regulations at the collecting point specified for electrical and electronic equipment.

If you have any questions, please contact the responsible authority or the distributor from which you purchased this device.

Should this device be passed on to other parties (for private or professional use), the content of this regulation must also be related.

Thank you for your contribution to environmental protection.

If the device is equipped with a storage battery:

The nickel metal hydride (NiMH) storage battery does not contain any heavy metals. However, it may not be disposed of with the normal refuse.

→ Observe the local regulations on the disposal of materials that are hazardous to the environment.

### 1.4 Use in hygienically sensitive areas

The device is suitable for use in hygienically sensitive areas. It fulfils the following requirements on areas coming into contact with the product (keyboard) and areas not coming into contact with the product (housing, stand):

- Suitability of the materials for contact with foodstuffs
- Continuous bonding joints that do not act on the material
- Smooth, non-porous and flat surfaces that are easy to clean
- Continuous welding seams
- No sharp corners

For further information please refer to Sections 8.2 and 8.3.

## 1.5 Description

### 1.5.1 Weighing terminals IND439check and IND439xx check

METTLER TOLEDO weighing platforms can be connected without problems to the weighing terminals.

The weighing terminals are available in two different basic versions: for connecting analog scales or for digital scales with IDNet interface.

Both basic versions are supplied by default with in-built power supply unit and an RS232 interface.

IND439xx check is approved for use in hazardous areas of the Category 3.

### 1.5.2 Compact scale BBA439check

The compact scale BBA439check consists of a terminal-stand combination that is connected to an analog weighing platform of the PBA430 series.

The compact scale is supplied by default with an in-built power supply unit and an RS232 interface.

### 1.5.3 Additional equipment

The following alternatives are also possible:

- Power supply via in-built storage battery
- Version for external power supply 12 – 24 V DC
- Power supply via an external storage battery (not for IND439xx check)
- Additional second communication interface


One of the following options is available as the second communication interface:

- RS232
- RS485/RS422
- Ethernet interface
- USB interface
- Digital I/O
- WLAN




### 1.5.4 Overview

- 1 Keys
- 2 Display
- 3 Measuring data sign

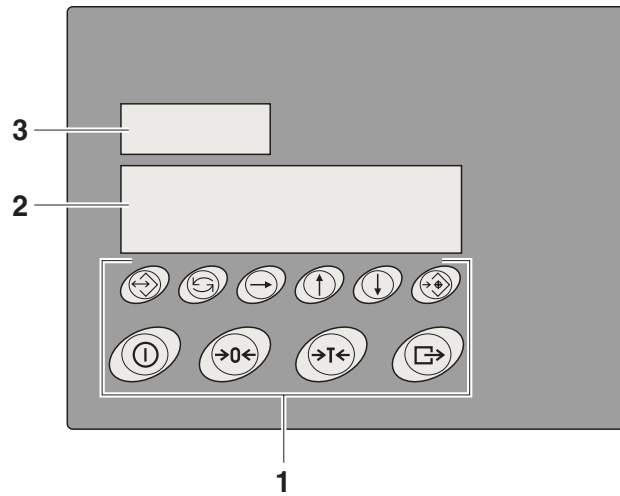


### Weighing terminal connections

- 1 Power supply connection
- 2 Pressure compensation
- 3 Equipotential bonding terminal, only for IND439xx check
- 4 COM1 interface
- 5 COM2 interface (optional)
- 6 Antenna for optional WLAN interface
- 7 not assigned
- 8 Scale connection
- 9 Securing plate for the interface connections, only for IND439xx check

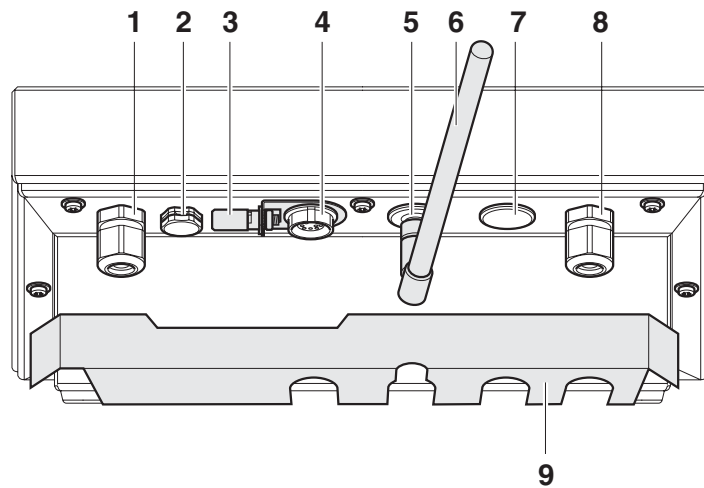


### Compact scale connections

- 1 COM1 interface
- 2 COM2 interface (optional)
- 3 Antenna for optional WLAN interface
- 4 Pressure compensation
- 5 Power supply connection
- 6 Scale connection

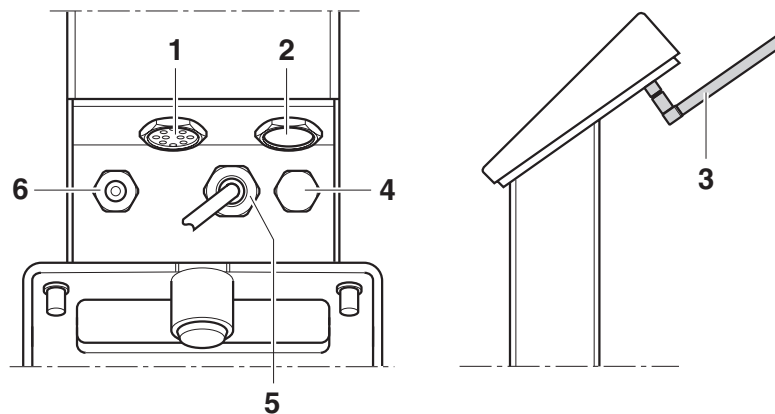



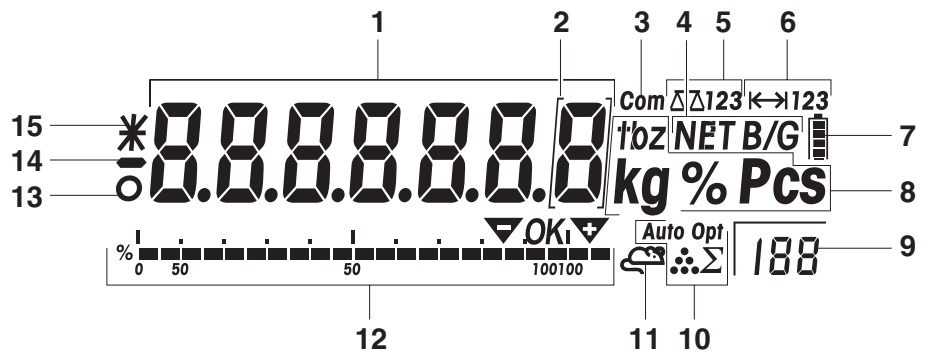

### 1.5.5 Display









- 1 7-segment display, 7 digits, with decimal point
- 2 Notation for weight values with  $e = 10 d$
- 3 Active interface
- 4 Symbol for displaying gross and net values
- 5 Active scale
- 6 Weighing range display
- 7 Charge state of the storage battery, only for devices with storage battery
- 8 Weight units
- 9 Display of additional information, e.g. tolerance mode
- 10 not used
- 11 not used
- 12 Graphics display of the weighing range, display for check weighing
- 13 Standstill check (goes out when a stable weight value has been reached)
- 14 Sign
- 15 Notation for modified or calculated weight values, e.g. higher resolution, weight below minimum value

## 1.5.6 Keyboard

### Main functions

Key	Function in the operating mode	Function in the menu
	Switch the terminal on/off; cancel	To the last menu item –End–
	Set scale to zero, delete tare Long keypress at scales with IDNet interface: Display of the ID code and checking of the calibration	Page backwards
	Tare scale, delete tare	Page forwards
	Transfer key Long keypress: Call up menu	Activate menu item Accept selected setting

### Additional functions

Key	Function
	Call up data record Long keypress: Store data record
	In weighing mode: Switch over weight unit When entering target values: Switch over tolerance mode In the memory: Display the stored results
	At entries: Switch to the next digit
	At entries: Increase digit by 1 In the memory: with a short keypress: change to the next memory, with a long keypress: jump 10 memory entries further
	At entries: Decrease digit by 1 In the memory: with a short keypress: change to the previous memory, with a long keypress: jump 10 memory entries back
	Determine target value and/or tolerances

## 1.6 Commissioning

The weighing platform connection to the weighing terminals IND439check / IND439xx check as well as the commissioning of the interfaces are described in the "IND4x9 / BBA4x9" installation instructions.

→ Call the METTLER TOLEDO service or carry out commissioning in accordance with the installation instructions.

### 1.6.1 Limited mobility at explosion protected weighing terminal IND439xx check



#### CAUTION!

The device may only be operated in Zone 2 and 22 hazardous areas.

- ▲ Protect data and signal cable extensions against inadvertent disconnection.
- ▲ Secure the interface connections on the rear using the interface plate.

### 1.6.2 Labelling for operation in hazardous area

The following signs must be mounted on the device, accompanying weighing platforms and accessories so that they are clearly visible:

- Model plate and the device's model data, manufacturer and serial number
- Safety instructions
- Explosion protection identification
- If appropriate, temperature range

### 1.6.3 Establishing a mains connection at an explosion protected weighing terminal IND439xx check



#### CAUTION!

The mains connection may only be connected by the owner's electrician.



#### CAUTION!

The device only operates correctly at a supply voltage of 230 V.

- ▲ Do not under any circumstances connect the device if the voltage value on the rating plate deviates from the local system voltage.
- ▲ Only connect the device to an earthed mains connection.
- ▲ Ensure that equipotential bonding has been implemented.

### 1.6.4 Establishing a mains connection at non-explosion-protected devices



#### CAUTION!


Before connecting the power supply check whether the voltage value printed on the rating plate agrees with the local system voltage.

▲ Do not under any circumstances connect the device if the voltage value on the rating plate deviates from the local system voltage.

→ Plug the power plug into the power socket.

After it has been connected, the device carries out a self-testing routine. The device is ready to operate when the zero display appears.

### 1.6.5 Devices with built-in or external storage battery

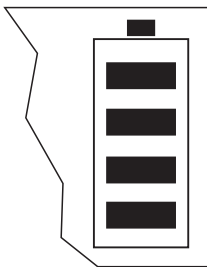

The operating life depends on the intensity of use, the configuration and the connected scale. For details see Section 7.1.2.

The battery symbol shows the current charge state of the storage battery. 1 segment corresponds to approx. 25% capacity. If the symbol flashes, the storage battery has to be charged. If work is continued during the charging process, the charging time is extended. The storage battery is protected against overcharging.

The charging time of the storage battery amounts to approx. 6 hours. If the device continues to be operated during the charging process, the charging time is extended. The storage battery has a service life of approx. 1,000 charging/discharging cycles.



#### CAUTION!

Explosion hazard!

▲ In the case of explosion protected devices the storage battery may only be charged in a safe area.



#### CAUTION!

Danger of soiling! The charger for the storage battery is not protected to IP69K.

▲ Do not charge the device in humid or dusty rooms.

▲ After the internal storage battery has been charged, close the cover cap of the charging socket at the device.

▲ Close the cover cap of the charging socket again at an external storage battery.

▲ In order to maintain degree of protection IP69K, make sure at devices with an external storage battery that the external storage battery is connected firmly to the device. Ensure that the plug connector of the external storage battery is inserted into the socket outlet of the device until it will go no further.

**Note** The storage battery is also suitable for permanent mains operation.

→ In order to obtain the full nominal capacity we recommend that you discharge the storage battery at regular intervals (approx. every 4 weeks) through normal operation.

## 1.6.6 Devices with external power supply 12 – 24 V DC

### Explosion protected weighing terminals IND439xx check

The device is supplied with a fixed-mounted 2.5 m long connecting cable with open ends.

Connection values: 12 – 24 V DC, max. 800 mA.

### Non-explosion-protected devices

The device is equipped with a socket for connecting the power supply.

Connection values: 12 – 24 V DC, max. 800 mA.

A connecting cable with open ends is included with the device.



### CAUTION!

Danger of soiling!

- ▲ In order to maintain degree of protection IP69K, make sure at devices with an external power supply that the connecting cable is connected firmly to the device. Ensure that the plug connector of the connecting cable is inserted into the socket outlet of the device until it will go no further.

## 1.6.7 Verification at partially verified scales

Partially verified scales (scales with first-stage verification) and scales with IDNet interface have to be verified by an authorized office or the METTLER TOLEDO Service.

→ Call the METTLER TOLEDO Service.

**Note** Adjust non-verified analog scales for the maximum precision, refer to Section 4.3.1.


## 2 Operation

### 2.1 Switching on and off

**Switching on** → Press .

The scale conducts a display test. Afterwards the software version identifier is displayed. When the weight display appears, the scale is ready to weigh.

#### Note

If  is pressed for a long time while switching on, the serial number of the device is also displayed after the software version identifier.

**Switching off** → Press .

Before the display goes out, -OFF- appears briefly.

### 2.2 Zeroing / Zero point correction

Zeroing corrects the influence of slight changes on the load plate or minor deviations from the zero point.

**Manual** 1. Unload scale.

2. Press .

The zero display appears.

**Automatic** In the case of scales that cannot be certified, the automatic zero point correction can be deactivated in the menu or the amount can be changed. Verified scales are set fixed to 0.5 d.

As standard, the zero point of the scale is automatically corrected when the scale is unloaded.

### 2.3 Simple weighing


1. Place weighing sample on scale.

2. Wait until the stability monitor  goes out.

3. Read weighing result.

## 2.4 Weighing with tare


### 2.4.1 Taring

→ Place the empty container on the scale and press .

The zero display and the symbol **NET** appear.

The tare weight remains saved until it is cleared.

### 2.4.2 Clearing the tare

→ Unload scale and press .

The symbol **NET** goes out, the zero display appears.

If `A.CL-tr` is activated in the menu under `SCALE` → `tArE`, the tare weight is automatically cleared as soon as the scale is unloaded.

### 2.4.3 Automatic taring

#### Prerequisite

`A-tArE` is activated in the menu under `SCALE` → `tArE`, the symbol **T** flashes in the display.

The packaging material must be heavier than 9 display steps of the scale.

→ Place the container or packaging material on the scale.


The packaging weight is automatically saved as the tare weight, the zero display and the symbol **NET** appear.

### 2.4.4 Chain tare

#### Prerequisite


The tare function `CHAIIn.tr` is activated in the menu under `SCALE` → `tArE`.

With this function it is possible to tare several times if, for example, cardboard is placed between individual layers in a container.

1. Place the first container or packaging material on the scale and press .

The packaging weight is automatically saved as the tare weight, the zero display and the symbol **NET** appear.

2. Weigh the weighing sample and read/print out the result.

3. Place the second container or packaging material on the scale and press  again.

The total weight on the scale is saved as the new tare weight. The zero display appears.

4. Weigh the weighing sample in the second container and read/print the result.

5. Repeat the last two steps for other containers.




## 2.5 Displaying the capacity available



The scale has a graphic display of the scale capacity available. The bar indicates how many per cent of the scale capacity is already occupied and what capacity is still available. In the example, approx. 65 % of the scale capacity is occupied.

## 2.6 Printing results

If a printer or computer is connected to the scale, the weighing results can be printed out or sent to a computer.

→ Press .

The display contents are printed out or transferred to the computer.

## 2.7 Cleaning

The device conforms to degree of protection IP69K to DIN 40050.

It is suitable for hygienically sensitive areas - see the proofs in Section 8.2.

The device is designed so that it can be cleaned easily. The housing is made of stainless steel 1.4301 (AISI 304), the keyboard of resistant polyester (PE). If required, high-pressure equipment can be used for cleaning.

### Cleaning

- Close open connectors with cap plugs.
- Clean the protective hood of the non-explosion-protected devices separately. The protective hood is dishwasher-proof.
- Replace protective hoods regularly.
- Use a moist cloth for minor soiling.
- Do not use acids, alkaline solutions or strong solvents.
- Observe the following limits when using high-pressure equipment:
  - Max. water temperature 80 °C / 176 °F
  - Max. water pressure 8,000 kPa (80 bars)
  - Min. distance jet nozzle to terminal 50 cm
  - Do not point the jet at one point for longer than 10 seconds
  - Water flow rate not greater than 10 l/min
- Observe all the existing regulations on cleaning intervals and permissible cleaning agents.


### Information on cleaning the weighing platform connected to the weighing terminal

→ Be sure to observe the cleaning instructions for the connected weighing platform. The weighing platform may not be designed for cleaning with high-pressure equipment.


## 2.8 Testing of weighing terminal and scale/display of the ID code (only for weighing terminals with IDNet interface)

The ID code is increased by 1 at every calibration in case of IDNet scales. For verified scales, the ID code displayed by the weighing terminal must match the ID code on the ID cards. Otherwise, the verification is no longer valid.

### 2.8.1 Displaying the ID code

1. Unload weighing platform.
2. Press the  key and keep it pressed until the display changes to -----.  
The ID code is then displayed: COdE= . . .

### 2.8.2 Testing the weighing platform and terminal

- After the ID code is displayed, press the  key again.  
CHE CAL is displayed. The weighing platform is tested.  
After a successful test CAL ok is displayed briefly.  
The terminal then changes to normal operation.

**Note** If a calibration error CAL Err is displayed during testing, repeat the test. If the error is displayed again, inform the METTLER TOLEDO Service.

## 3 Check weighing

The device disposes of additional functions for check weighing. The corresponding settings in the menu are described in Section 4.5.

The corresponding colored background lighting allows rapid understanding of the states "too light" (factory setting: red), "good" (factory setting: green) and "too heavy" (factory setting: yellow). The colors can be modified in the menu, refer to Page 35.

### 3.1 Specifying target values


Different entries are required at the beginning of check weighing, depending on the setting for the tolerance mode.

- Tolerance mode **Absolute** (factory setting): The lower (LOW) and upper (HIGH) tolerance values have to be specified. The target weight is calculated automatically as the mean value of the two tolerance values
- Tolerance mode **Relative**: The target weight ( $t_{ArGEt}$ ) as well as the lower ( $t_{OL-}$ ) and upper ( $t_{OL+}$ ) tolerance values have to be specified. The tolerances have to be entered as relative deviations from the target value.
- Tolerance mode **Percentage**: The target weight ( $t_{ArGEt}$ ) as well as the lower ( $t_{OL-}$ ) and upper ( $t_{OL+}$ ) tolerance values have to be specified. At check weighing the weight value is represented as a percentage of the target weight. In check weighing mode the target weight 100 % is striven for, or 0 % at check weighing to zero.



#### 3.1.1 Weighing in target values

The following section describes the course of the factory setting for the CHECK application.

##### With operator guidance

1. Press .


The check weighing mode is activated. The color of the display background changes. Depending on the tolerance mode setting, (LOW) or ( $t_{ArGEt}$ ) is requested as the first weight value. The set tolerance mode is shown in the lower right-hand corner with the characters **A** (absolute), **r** (relative) and **P** (percentage).

2. If desired, use  to change the tolerance mode.
3. Place the required weight on the scale and press .


The color of the display background changes again. The next weight value is requested.

4. Repeat Step 3 until no further weight values are requested.

The scale is ready for check weighing.


- Note**
- The applied weights can also be confirmed with .
  - The upper tolerance value has to be higher than the lower one (HIGH > LOW) respectively the target weight has to be higher than the lower tolerance value (TARGET > TOL-).

### Alternatively

1. Place the weight on the scale and press .

Depending on the tolerance mode setting, this weight value is stored as the lower tolerance value (LOW) or as the target weight (TARGET). The set tolerance mode is shown in the lower right-hand corner with the characters **A** (absolute), **r** (relative) and **P** (percentage).


The color of the display background changes, the next weight value is requested.

2. Place the required weight on the scale and press .

The color of the display background changes again. A further weight value is requested in the tolerance mode settings **r** (relative) and **P** (percentage).


3. If necessary, repeat Step 2.


The scale is ready for check weighing.





- Note** The second and, if appropriate, third weight value can also be confirmed with .


### 3.1.2 Specifying target values numerically


The following section describes the course of the factory setting for the CHECK application.

1. Unload the scale and press .
 

The check weighing mode is activated. Depending on the tolerance mode setting, (LOW) or (tARGET) is requested as the first weight value.
2. Press .
 



The weight display appears with a flashing first number.
3. Change the number using the keys  and .
4. Use  to accept the number and change to the next position.
5. Enter all further numbers as described.
6. Confirm the entered weight value using .
 

The color of the display background changes again. The next weight value is requested.
7. Press .
 

The weight display appears with a flashing first number.
8. Enter the requested weight value and confirm with .
 


The color of the display background changes again. The next weight value is requested.
9. Repeat the entry until no further weight values are requested.
 





The scale is ready for check weighing.

**Note** In the tolerance modes **r** (relative) and **P** (percentage) the same value is automatically suggested for the upper tolerance value (tOL+) as for the lower tolerance value (tOL-) after  has been pressed. If symmetrical tolerance values are required, the suggested value can be accepted directly by pressing .

### 3.1.3 Using stored target values



#### Storing target values

1. Enter the target values as described in Section 3.1.1 or 3.1.2.
2. Keep  pressed approx. 3 seconds long.
 

The display changes to green (factory setting for the state "good") and the message FREE appears. The number of the first free memory is displayed in the lower right-hand corner.
3. If appropriate, press the keys  or  until the desired memory slot appears. If the key is pressed for a longer time, the system jumps 10 slots.
4. Press  or .
 




StORed appears briefly in the display.  
The target value is stored under the selected number.

**Note** If the selected memory slot is already occupied, the background lighting changes to red (factory setting for the state "too light").

→ In order to overwrite the slot with the new values, press .  
The message `SURE?` appears. Press  again.

-or-



→ To abort the procedure press .

→ Press  again or the keys  or  in order to return to the next free memory slot.

### Loading the target values

1. Press .

The first occupied memory slot is displayed with its first value.

2. If appropriate, press the keys  or  until the desired memory slot appears.



3. Press .


The message `LOAD` and the stored values are displayed in rapid succession.

Then the scale is ready for check weighing.

### Alternatively

1. Press .

2. Select the desired storage number with the keys  or .

**Note** With  the article parameters (such as the target values, tolerance mode, etc.) of the selected memory slot are displayed.

## 3.2 Check weighing


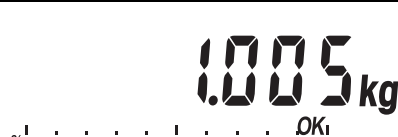




The device facilitates check weighing through different colored background lighting for the states "too light" (factory setting: red), "good" (factory setting: green) and "too heavy" (factory setting: yellow).

1. Enter or load the target values as described in Section 3.1.
2. Place the check weighing material on the scale.

Depending on the applied weight the color of the background lighting changes. The weight value is displayed in accordance with the tolerance mode setting.

### Display at check weighing

In addition to the colored background lighting the graphics display provides support in particular during dispensing procedures. The following overview lists the colors of the factory setting.

Target values	Display	Color	Meaning
<b>Absolute</b> Low = 0.950 kg High = 1.050 kg <b>Relative</b> Target = 1.000 kg Tol- = 0.050 kg Tol+ = 0.050 kg		<b>Red</b>	<b>Too light</b> Weight below the lower tolerance value
		<b>Green</b>	<b>Good</b> Weight within the tolerance values
		<b>Yellow</b>	<b>Too heavy</b> Weight above the upper tolerance value
<b>Percent</b> Target = 1.000 kg Tol- = 5 % Tol+ = 5 %		<b>Red</b>	<b>Too light</b> Weight below the lower tolerance value
		<b>Green</b>	<b>Good</b> Weight within the tolerance values
		<b>Yellow</b>	<b>Too heavy</b> Weight above the upper tolerance value

### 3.3 Check weighing with "quick start"

If fixed stored tolerance value are used in the tolerance mode **r** (relative) or **P** (percentage), check weighing can be started by pressing just one key.

#### Prerequisite

- The setting **YES** is selected in the menu under **APPLIC -> CHECK -> tOL- ErAN -> dEFAULT -> USE** .
- Tolerance values are defined under **APPLIC -> CHECK -> tOLErAN -> dEFAULT -> VALUES** .

**Course** → Place the target weight on the scale and press .

The applied weight is stored as the target weight. The display changes to the state "good" (factory setting = green).

The check weighing mode is activated.

### 3.4 Check weighing to zero

The weight value can also be represented as the difference to the target weight.

#### Prerequisite

- **rELAtIV** or **PERCENT** is selected under **APPLIC -> CHECK -> tOLErAN -> MODE**.
- **tO ZErO** is selected under **APPLIC -> CHECK -> dISPLAY -> MODE** .

**Course** 1. Enter or load the target values as described in Section 3.1 or 3.3.

The target weight is displayed with a negative preceding sign.


2. Place the check weighing material on the scale.

Depending on the applied weight the color of the background lighting changes. The weight value is displayed in accordance with the tolerance mode setting. The target weight is 0 (kg) or 0.00 %.

### 3.5 Terminating check weighing

#### Prerequisite

The weight display shows the gross weight 0.

1. Press .

Depending on the set tolerance mode **tArGET** or **Low** is displayed.

2. Press  again.

The device operates in normal weighing mode.



## 4 Settings in the menu

Settings can be changed and functions can be activated in the menu. This enables adaptation to individual weighing requirements.



The menu consists of 6 main blocks containing various submenus on several levels.

### 4.1 Operating the menu

#### 4.1.1 Calling up the menu and entering the password



The menu differentiates between 2 operating levels: Operator and Supervisor. The Supervisor level can be protected by a password. When the device is delivered, both levels are accessible without a password.

##### Operator menu

1. Press  and keep it pressed until CODE appears.
2. Press  again.


The menu item tErMINL appears. Only the submenu dEVICE is accessible.

##### Supervisor menu

1. Press  and keep it pressed until CODE appears.
2. Enter the password and confirm with .



The first menu item SCALE appears.

##### Note


No supervisor password has been defined when the device is first delivered. Therefore, respond to the password inquiry with  when you call up the menu for the first time. If a password has still not been entered after a few seconds, the scale returns to weighing mode.

##### Emergency password for Supervisor access to the menu

If a password has been issued for Supervisor access to the menu and you have forgotten it, you can still enter the menu:

- Press  3 times and confirm with .

### 4.1.2 Selecting and setting parameters

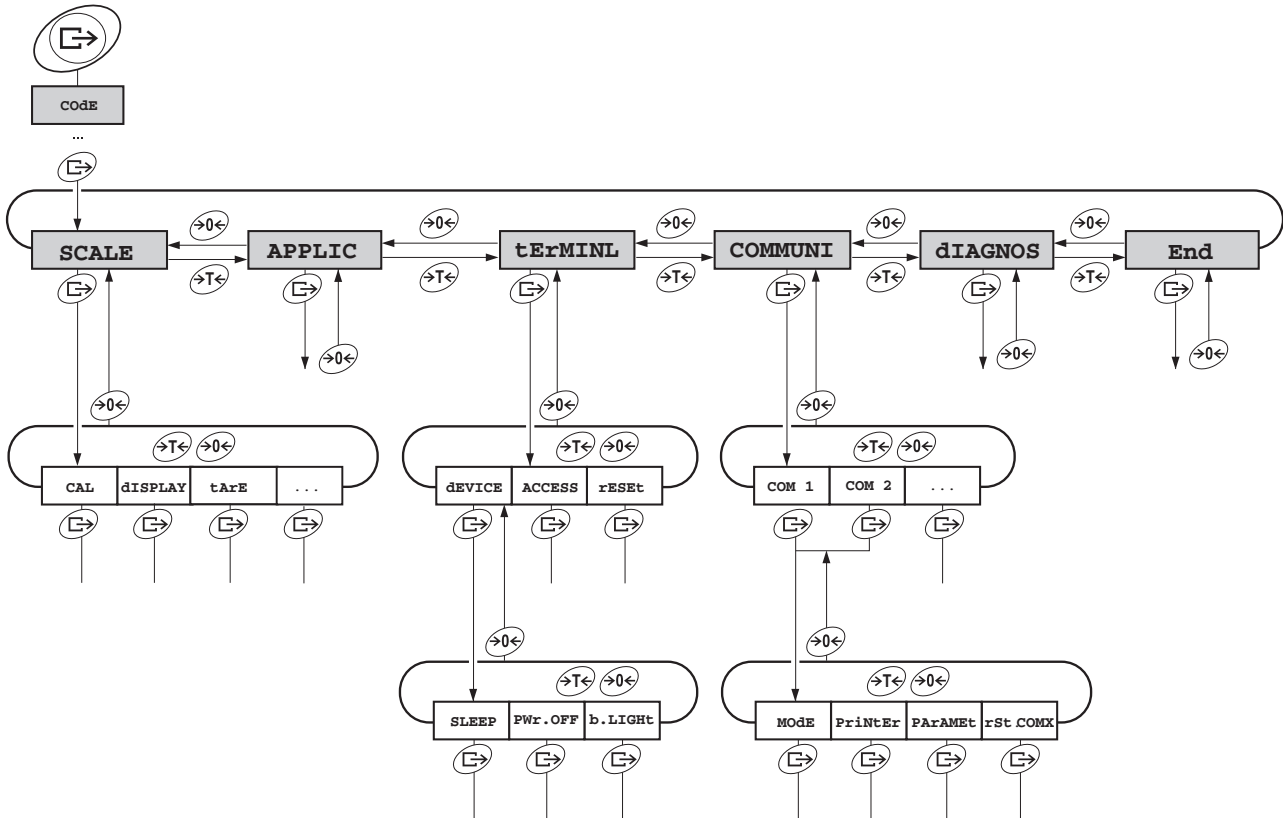

- Scrolling on one level**
- Scroll forward: Press →T←.
  - Scroll back: Press →0←.

**Activating menu items/ accepting selection** → Press →E←.

- Exiting menu**
1. Press ①.  
The last menu item End appears.
  2. Press →E←.  
The inquiry SAVE appears.
  3. Confirm inquiry with →E← to save the settings and return to weighing mode.  
-or-  
→ Press →T← to discard changes and return to weighing mode.

**Note** The SCALE menu block depends on the built-in scale interface.

## 4.2 Overview

Factory settings are printed **bold** in the following overview.

Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	Page
<b>SCALE</b> (analog)	CAL					31
	dISPLAY	UNIt1	g, <b>kg</b> , oz, lb, t			31
		UNIt2	<b>g</b> , kg, oz, lb, t			
		rESOLU				
		UNt.rOLL	ON, <b>OFF</b>			
	tArE	A-tArE	ON, <b>OFF</b>			31
		ChAIn.tr	<b>ON</b> , OFF			
		A.CL-tr	ON, <b>OFF</b> , 9 d			
	ZErO	AZM	OFF; <b>0.5 d</b> ; 1 d; 2 d; 5 d; 10 d			31
	rEStArt	ON, <b>OFF</b>				32
	FILtEr	VibrAt	LOW, <b>Med</b> , HIGH,			32
		PrOCESs	<b>UNIVER</b> , dOSING			
		StAbILI	FASt, <b>StAndrd</b> , PrECISE			
	Min.WEiG	ON/OFF	ON, <b>OFF</b>			32
rESEt	SURe?				32	
<b>SCALE</b> (IDNet)	dISPLAY	UNIt2	<b>g</b> , kg, oz, lb, t		33	
		UNt.rOLL	ON, <b>OFF</b>			
	tArE	A-tArE	ON, <b>OFF</b>			33
		ChAIn.tr	<b>ON</b> , OFF			
		A.CL-tr	ON, <b>OFF</b> , 9 d			
	ZErO	AZM	<b>ON</b> , OFF			33
	rEStArt	ON, <b>OFF</b>				33
	FILtEr	VibrAt	StAbLE, <b>nOrMAL</b> , UnStAbL,			34
		PrOCESs	FinEFiL, <b>UNIVERs</b> , AbSOLUt			
		StAbILI	ASd=0, ASd=1, <b>ASd=2</b> , ASd=3, ASd=4			
	UPdAtE	Setting possibilities depend on the connected scale				34
Min.WEiG	ON/OFF	ON, <b>OFF</b>			34	
rESEt	SURe?				34	

Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	Page
<b>APPLIC</b>	CHECK	tOLerAN	MOde	<b>ABSOLUt</b> , rELAtIV, PErCENT		35
			dEFAULT	USE	<b>No</b> , YES	
				VALUES	rELAtIV, PErCENT	
		dISPLAY	MOde	<b>NOrMAL</b> , tO ZErO, StEALtH		35
			BACK.COL	SP.tOL-		
				tOL-		
				GOOd		
		OUtPUt	SP.tOL-		36	
			SP.tOL--			36
			SEnDMod	<b>CONtINU</b> , StAbLE		
			G.PrINt	<b>YES</b> , NO		
		ACCESS	SAVE	<b>UNLOCK</b> , LOCK		36
	rECALL		<b>UNLOCK</b> , LOCK			
	tArGET		<b>UNLOCK</b> , LOCK			
	MEMOrY	CLEAr.M	SUrE?		37	
rESEt	SUrE?		37			
<b>tERMINL</b>	dEVICE	SLEEP	<b>OFF</b> , 1 min, 3 min, 5 min, 15 min, 30 min		37	
		PWr OFF	<b>OFF</b> , 1 min, 3 min, 5 min, 15 min, 30 min			
		b.LIGHT	ON/OFF	<b>ON</b> , OFF, 5 sec, 10 sec, 30 sec, 1 min		
			BACK.COL			
	ACCESS	SUPErVI		38		
	rESEt	SUrE?		38		




Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	Page	
COMMUNI	COM 1/COM 2	MODE	Print			39	
			A.Print				
			CONTINU				
			dIALOG				
			MMr				
			MMr.A.SIr				
			CONT.OLd				
			dIAL.OLd				
			dt-b	GrOSS	ON, OFF		
				tArE	ON, OFF		
				nEt	ON, OFF		
			dt-G	GrOSS	ON, OFF		
				tArE	ON, OFF		
				nEt	ON, OFF		
			COnt-Wt				
		2nd.dISP					
		InSt.Prn					
		PriNtEr	tYPE	ASCII, GA46		40	
			tEMPLat	StdArd, tEMPLt1, tEMPLt2			
			ASci.Fmt	LINE.FMt	MULTI SINGLE FIXED		
				LENGth	1 ... 24 ... 100		
				SEPARAt	, ; ...		
				Add LF	0 ... 9		
			PARAMet	bAUd	300 ... 2400 ... 38400		40
		PARity		7 nonE, 8 nonE, 7 odd, 8 odd, 7 EVEN, 8 EVEN			
		H.SHAKE		NO, XONXOFF, nEt 422, nEt 485			
		NEt.Addr		0 ... 31			
ChECsUM	ON, OFF						
Vcc	ON, OFF						
rSt.COMx	SUrE?			40			

Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	Page
<b>COMMUNI</b>	OPtION	EtH.NET	IP.AddrS, SUBnEt, GAtEWAY			41
		WLAN	IP.AddrS, SUBnEt, GAtEWAY, SIGNAL			
		USb	USb tEst			
		diGiTAL	IN 0 ... 3	<b>OFF</b> , ZErO, tArE, Print, UNIt, rECALL, SAVE, tArGET, Arr.rIG, Arr.UP, Arr.DOWN, StArt		
	OUT 0 ... 3		<b>OFF</b> , StAbLE, tArE, bEL.Min, AbV.Min, UndErLd, OvErLd, StAr, SP.tOL-, SP.tOL--, tOL-, GOOD, tArGET, tOL+			
dEF.PrN	tEMPLt1/ tEMPLt2	LINE 1 ... LINE 12	<b>Not .USED</b> , HEAdEr, GrOSS, tArE, nEt, tArGET, dEVIAt, tOL-, tOL+, tOL.tYP, StArLN, CrLF, F.FEEd		42	
<b>dIAGNOS</b>	tEst SC					43
	KboArD					
	dISPLAY					
	SNr					
	LiSt					
	LiSt.M					
	rESEt.AL	SUrE?				


### 4.3 Scale settings (SCALE) – analog

#### 4.3.1 CAL – calibration (adjustment)

This menu item is not available for certified scales.

CAL	<ol style="list-style-type: none"> <li>1. Unload scale.</li> <li>2. Activate menu item CAL with . The scale determines the zero point. -0- appears in the display. The calibration weight to be placed on the scale then flashes in the display.</li> <li>3. If necessary, change the weight value displayed with .</li> <li>4. Place the calibration weight on the scale and confirm with .</li> </ol> <p>The scale calibrates with the calibration weight loaded. After calibration is completed, -donE- appears briefly in the display, and the scale automatically returns to weighing mode.</p> <p>In order to achieve particularly high precision, calibrate under full load.</p>
-----	--

#### 4.3.2 DISPLAY – weighing unit and display accuracy

UNIT1	Select weighing unit 1: g, kg, oz, lb, t
UNIT2	Select weighing unit 2: g, kg, oz, lb, t
RESOLU	Select readability (resolution), model-dependent
UNT.rOLL	When UNT.rOLL is switched on, the weight value can be displayed in all available units with  .
Notes	<ul style="list-style-type: none"> <li>• In the case of certified scales individual sub-items of the DISPLAY menu item may not be available or only to a limited extent, depending on the respective country.</li> <li>• On dual-range/dual interval scales, resolutions marked with <math>\left  \leftarrow \rightarrow \right  1/2</math> are divided up into 2 weighing ranges / intervals, e.g. 2 x 3000 d.</li> </ul>

#### 4.3.3 TARE – tare function

A-tArE	Switching on/off automatic taring
CHAIIn.tr	Switching on/off chain tare
A.CL-tr	Switching on/off automatic clearing of the tare weight when the load is removed from scale Possible settings: OFF, ON, 9 d

#### 4.3.4 ZERO – automatic zero update

AZM	On certified scales, this menu item does not appear. Switching on/off automatic zero update and selecting zeroing range. Possible settings: OFF; 0.5 d; 1 d; 2 d; 5 d; 10 d
-----	---

#### 4.3.5 RESTART – automatic saving of zero point and tare value

<b>ON/OFF</b>	When the Restart function is activated, the last zero point and tare value are saved. After switching off / on or after a power interruption, the device continues to work with the saved zero point and tare value.
---------------	--

#### 4.3.6 FILTER – adaptation to the ambient conditions and the weighing type



<b>VibrAt</b> LOW  MED  HIGH	Adaptation to the ambient conditions <ul style="list-style-type: none"> <li>• Very steady and stable environment. The scale works very rapidly, but is very sensitive to external influences.</li> <li>• Normal environment. The scale operates at medium speed.</li> <li>• Restless environment. The scale works more slowly, but is insensitive to external influences.</li> </ul>
<b>PrOCeSS</b> UNIVER dOSING	Adaptation to the weighing process <ul style="list-style-type: none"> <li>• Universal setting for all weighing samples and normal weighing goods</li> <li>• Dispensing liquid or powdery weighing samples</li> </ul>
<b>StAbILI</b> FASt  StAndrd  PrECISE	Adjusting the stability detector <ul style="list-style-type: none"> <li>• The scale operates very fast.</li> <li>• The scale operates at medium speed.</li> <li>• The scale operates with the greatest possible reproducibility.</li> </ul> <p>The slower the scale works, the greater the reproducibility of the weighing results.</p>

#### 4.3.7 MIN.WEIG – minimum weight

This menu item appears only if the service technician has saved a minimum weight.

<b>ON/OFF</b>	Switching minimum weight function on/off If the weight on the scale falls below the stored minimum weight, an * appears on the display in front of the weight indicator.
---------------	---

#### 4.3.8 RESET – resetting scale settings to factory settings

<b>SUrE?</b>	Confirmation inquiry <ul style="list-style-type: none"> <li>• Reset the scale settings to factory settings with </li> <li>• Do not reset scale settings with </li> </ul>
--------------	--



## 4.4 Scale settings (SCALE) – IDNet

### 4.4.1 DISPLAY – weighing unit

<b>UNIT2</b>	Select weighing unit 2: g, kg, oz, lb, t
Notes	<ul style="list-style-type: none"> <li>In the case of certified scales individual sub-items of the <code>DISPLAY</code> menu item may not be available or only to a limited extent, depending on the respective country.</li> <li>For two-range/two-interval scales, resolutions identified with <code>1/2</code> are divided into the 2 weighing ranges/intervals, for example 2 x 3000 d.</li> </ul>

### 4.4.2 TARE – tare function

<b>A-tArE</b>	Switching on/off automatic taring
<b>CHAIIn.tr</b>	Switching on/off chain tare
<b>A.CL-tr</b>	Switching on/off automatic clearing of the tare weight when the load is removed from scale Possible settings: OFF, ON, 9 d

### 4.4.3 ZERO – automatic zero update

<b>AZM</b>	<p>On certified scales, this menu item does not appear.</p> <p>Switching on/off automatic zero update.</p> <p>The effective range of the zero update mode (0.5 d, 1.0 d, 3.0 d) can only be set by service technicians in case of IDNet scales.</p> <p>Factory setting: 0.5 d</p>
------------	---

### 4.4.4 RESTART – automatic saving of zero point and tare value

<b>ON/OFF</b>	<p>When the Restart function is activated, the last zero point and tare value are saved.</p> <p>After switching off /on or after a power interruption, the device continues to work with the saved zero point and tare value.</p>
---------------	---

#### 4.4.5 FILTER – adaptation to the ambient conditions and the weighing type

<b>VIbrAt</b> StAbLE nOrMAL UnStAbL	Adaptation to the ambient conditions <ul style="list-style-type: none"> <li>• Very steady and stable environment. The scale works very rapidly, but is very sensitive to external influences.</li> <li>• Normal environment. The scale operates at medium speed.</li> <li>• Restless environment. The scale operates more slowly, but is insensitive to external influences.</li> </ul>																		
<b>PrOCeSS</b> FinEFIL UniVERs AbSOLUt	Adaptation to the weighing process <ul style="list-style-type: none"> <li>• Dispensing of liquid or powdered weighing samples</li> <li>• Universal setting for all weighing modes and normal weighing samples</li> <li>• For solid bodies under extreme conditions, e.g. strong vibrations</li> </ul>																		
<b>StAbILI</b> ASd=0 ... ASd=4	<table> <tr> <td>ASD = 0</td> <td>Stability monitoring switched off</td> <td></td> </tr> <tr> <td></td> <td>Only possible for non-verifiable weighing platforms</td> <td></td> </tr> <tr> <td>ASD = 1</td> <td>Rapid display</td> <td>Good reproducibility</td> </tr> <tr> <td>ASD = 2</td> <td>↑</td> <td>↓</td> </tr> <tr> <td>ASD = 3</td> <td>↑</td> <td>↓</td> </tr> <tr> <td>ASD = 4</td> <td>Slow display</td> <td>Excellent reproducibility</td> </tr> </table>	ASD = 0	Stability monitoring switched off			Only possible for non-verifiable weighing platforms		ASD = 1	Rapid display	Good reproducibility	ASD = 2	↑	↓	ASD = 3	↑	↓	ASD = 4	Slow display	Excellent reproducibility
ASD = 0	Stability monitoring switched off																		
	Only possible for non-verifiable weighing platforms																		
ASD = 1	Rapid display	Good reproducibility																	
ASD = 2	↑	↓																	
ASD = 3	↑	↓																	
ASD = 4	Slow display	Excellent reproducibility																	

#### 4.4.6 UPDATE – setting the display speed of the weight display

This menu item is only displayed if the UPDATE function is supported by the connected weighing platform.


<b>xx UPS</b>	Selecting the number of updates per second (UPS)
Note	The possible settings depend on the connected weighing platform.

#### 4.4.7 MIN.WEIG – minimum weighing-in quantity

This menu item appears only if the service technician has saved a minimum weight.

<b>ON/OFF</b>	Switching minimum weight function on/off If the weight on the scale falls below the stored minimum weight, an * appears on the display in front of the weight indicator.
---------------	---

#### 4.4.8 RESET – resetting scale settings to factory settings

<b>SUR?</b>	Confirmation inquiry <ul style="list-style-type: none"> <li>• Do not reset scale settings with </li> </ul>
-------------	---

## 4.5 Application settings (APPLICATION)

### 4.5.1 CHECK -> TOLERAN – tolerance settings

<b>MODE</b>	Set the type of tolerances
ABSOLUt	<ul style="list-style-type: none"> <li>Enter the lower and upper tolerance as absolute values</li> </ul>
rELAtIV	<ul style="list-style-type: none"> <li>Enter the lower and upper tolerance as relative deviations from the target weight</li> </ul>
PErCENT	<ul style="list-style-type: none"> <li>Enter the lower and upper tolerance as a percentage</li> <li>Not possible for counting</li> </ul>
<b>DEFAULT</b>	Working with the specified tolerances. This allows check weighing to be started by pressing just one key.
USE	<ul style="list-style-type: none"> <li>Activate/deactivate specified tolerances</li> </ul>
VALUES	<ul style="list-style-type: none"> <li>rELAtIV – specify the upper and lower tolerance as a deviation from the target weight as a weight value</li> <li>PErCENT – specify the upper and lower tolerance as a deviation from the target weight as a percentage</li> <li>PIECES – specify the upper and lower tolerance as a deviation from the target value in pieces</li> </ul>

### 4.5.2 CHECK-> DISPLAY – display settings

<b>MODE</b>	Display of the current weight value based on the target weight
NOrMAL	<ul style="list-style-type: none"> <li>Display of the weight value (at the setting tOLERAN -&gt; MODE -&gt; ABSOLUt or tOLERAN -&gt; MODE -&gt; rELAtIV)</li> <li>Display as a percentage of the target weight (at the setting tOLERAN -&gt; MODE -&gt; PErCENT)</li> </ul>
tO ZErO	<ul style="list-style-type: none"> <li>Display of the difference to the target weight</li> </ul>
StEALtH	<ul style="list-style-type: none"> <li>No weight display, only color display for "too light", "good" and "too heavy"</li> </ul>
<b>BACK.COL</b>	Color setting of the background lighting for check weighing.
SP.tOL-	<ul style="list-style-type: none"> <li>Color setting for weight values below the threshold (SP.tOL-)</li> </ul>
tOL-	<ul style="list-style-type: none"> <li>Color setting for weight values below the lower tolerance value</li> </ul>
GOOd	<ul style="list-style-type: none"> <li>Color setting for weight values within the tolerance values</li> </ul>
tOL+	<ul style="list-style-type: none"> <li>Color setting for weight values above the upper tolerance value</li> </ul>
Information on color setting	<ul style="list-style-type: none"> <li>The color setting is specified with 3 values for red, green and blue, for example 7-0-0 for a red background lighting.</li> <li>The values can be increased by using the keys lying respectively under them. The new color value is displayed immediately.</li> <li>The total of the 3 color values may amount to a maximum of 8.</li> <li>If the setting 0-0-0 is used, the background lighting is disabled.</li> </ul>



### 4.5.3 CHECK -> OUTPUT – setting the output options

<b>SP.tOL-</b> <b>SP.tOL--</b>	<p>Limit for activation of the I/O relay box. The value to be entered is the percentage proportion of the lower tolerance of the target weight/target quantity.</p> <p>Checking the SP.Tol-- is carried out with the gross weight, for SP.Tol- with the net weight.</p> <p>SP.Tol- is dependent on SP.Tol--; in other words, if SP.Tol-- has not yet been reached, the SP.Tol- output will not go active.</p> <p>If both setpoints are used, the SP.Tol-- must be less than SP.Tol-.</p> <p>EXAMPLE</p> <p>Target weight:       2000 g  tOLER+ :             2010 g  tOLER- :             1990 g  SP.tOL- :            010 (%)</p> <p>The relay box is not activated until 199 g (= 10 % of 1990 g) is reached.</p>
<b>SEnd.MOd</b>  CONTINU  StAbLE	<p>Specifies the form in which the scale sends information to the I/O relay box and when the background color changes</p> <ul style="list-style-type: none"> <li>Information is sent permanently, the background color switches over immediately</li> <li>Information is only sent at a stable weight value. The background color is not switched over until a stable weight value has been reached</li> </ul>
<b>G.PrINt</b>  YES  NO	<p>Good Print</p> <ul style="list-style-type: none"> <li>Automatic printout when a stable weight value within the tolerance values exists</li> <li>No automatic printout</li> </ul>
Note	The interface has to be set to PrINt for "Good Print". In the setting A.PrINt every stable weight value is printed out, irrespective of whether it lies within or outside the tolerance values.



### 4.5.4 CHECK -> ACCESS – protecting keys and functions

<b>SAVE</b>  UNLOCK  LOCK	<p>Save target weights and tolerance values</p> <ul style="list-style-type: none"> <li>Saving by the operator allowed</li> <li>Saving protected by the Supervisor password</li> </ul>
<b>rECALL</b>  UNLOCK  LOCK	<p>Recall target weights and tolerance values</p> <ul style="list-style-type: none"> <li>Recalling by the operator allowed</li> <li>Recalling protected by the Supervisor password</li> </ul>
<b>tARGET</b>  UNLOCK  LOCK	<p>Enter target weights and tolerance values</p> <ul style="list-style-type: none"> <li>Entering by the operator allowed</li> <li>Entering protected by the Supervisor password</li> </ul>

#### 4.5.5 MEMORY – deleting target value memory


<b>CLEAr .M</b>  SUrE?	Delete target value memory Safety prompt <ul style="list-style-type: none"> <li>• Press  to delete all the target value memories</li> <li>• Press  to not delete the target value memories</li> </ul>
------------------------------	--

#### 4.5.6 RESET – resetting application settings to factory settings

<b>SUrE?</b>	Confirmation inquiry <ul style="list-style-type: none"> <li>• Reset the application settings to factory settings with </li> <li>• Do not reset the application settings with </li> </ul>
--------------	--

### 4.6 Terminal settings (TERMINAL)



#### 4.6.1 DEVICE – sleep mode, energy-saving mode and display backlighting

<b>SLEEP</b>	This menu item only appears on devices in mains operation. When <b>SLEEP</b> is activated, the scale switches off display and backlighting after the time period set when not in use. The display and backlighting are switched on again at the press of a key or if the weight changes. Possible settings: OFF, 1 min, 3 min, 5 min, 15 min, 30 min
<b>PWr OFF</b>	This menu item only appears on devices in battery operation. When <b>PWr OFF</b> is activated, the device switches itself off automatically after approx. 3 minutes when not in use. After this, it must be switched on again using  . Possible settings: OFF, 1 min, 3 min, 5 min, 15 min, 30 min



## 4.7 Configuring interfaces (COMMUNICATION)

### 4.7.1 COM1/COM2 -> MODE – operating mode of the serial interface

<b>Print</b>	Manual data output to the printer with 
<b>A.Print</b>	Automatic output of stable results to the printer (e. g. for series weighing operations)
<b>CONTINU</b>	Ongoing output of all weight values via the interface
<b>dIALOG</b>	Bi-directional communication via MT-SICS commands, control of the scale via PC
<b>MMr</b>	Bidirectional communication via MMR commands, controlling of a scale via a PC, command set compatible to the weighing terminals ID1 and ID3.
<b>MMr.A.SIr</b>	Automatic continuous transmission: a stable or dynamic weight value is transmitted after every measuring cycle.
<b>Cont.OLd</b>	As per CONTINU, see above, but with 2 fixed blanks in front of the unit (compatible with Spider 1/2/3)
<b>dIAL.OLd</b>	As per dIALOG, see above, but with 2 fixed blanks in front of the unit (compatible with Spider 1/2/3)
<b>dt-b</b> GrOSS tArE nEt	DigiTOL-compatible format. <ul style="list-style-type: none"> <li>• Transfer of the gross weight, identified with "B"</li> <li>• Transfer of the tare weight</li> <li>• Transfer of the net weight</li> </ul>
<b>dt-G</b>	As per dt-b, see above, gross weight identified with "G"
<b>Cont-wt</b>	TOLEDO Continuous mode
<b>2nd.dISP</b>	For connecting a second display (automatically activates the 5-V voltage supply at Pin 9)
<b>InSt.Prn</b>	Immediate manual data output to the printer with  (not certifiable)

#### 4.7.2 COM1/COM2 -> PRINTER – settings for protocol printout



This menu item only appears if the mode "Print" or "A.Print" is selected.

<b>tYPE</b>	Select the printer type
ASCII	• ASCII printer
GA46	• GA46 printer
<b>tEmPLat</b>	Selecting protocol printout
StdArd	• Standard printout
tEmPLt1	• Printout in accordance with Template 1
tEmPLt2	• Printout in accordance with Template 2
<b>ASci.Fmt</b>	Selecting formats for the protocol printout
LINE.Fmt	• Line format: <b>MULTI</b> (multiple lines), <b>SINGLE</b> (single lines) or <b>FIXED</b> (Records are output in single lines. Every record encompasses the number of character that was defined under <b>LENGtH</b> .)
LENGtH	• Line length: 0 to 100 characters, is only displayed at the line format <b>MULTI</b> and <b>FIXED</b>
SEPArAt	• Separator: , ; . / \ _ and space; appears only with line format <b>SINGLE</b>
Add LF	• Line feed: 0 ... 9

#### 4.7.3 COM1/COM2 -> PARAMET – communication parameters

<b>bAUd</b>	Selecting baud rate: 300, 600, 1200, 2400, 4800, 9600, 19200, 38400 baud
<b>PARity</b>	Selecting parity: 7 none, 8 none, 7 odd, 8 odd, 7 even, 8 even
<b>H.SHAKE</b>	Select handshake: NO, XONXOFF, NET 422 (network operation via the optional RS422/RS485 interface via 4-wire bus, only for COM1), NET 485 (network operation via the optional RS422/RS485 interface via 2-wire bus, only for COM1)
<b>NEt.Addr</b>	Assigning network address: 0 ... 31, only for NET 485
<b>ChECsUM</b>	Activating checksum byte (appears only in TOLEDO Continuous mode)
<b>Vcc</b>	Switching 5 V voltage, e.g. for a bar code reader or an optional interface RS485/422, on/off

#### 4.7.4 COM1/COM2 -> RESET COM1/RESET COM2 – resetting serial interface to factory settings

<b>SURe?</b>	Confirmation inquiry
	<ul style="list-style-type: none"> <li>• Reset interface settings to factory settings with </li> <li>• Do not reset the interface settings with </li> </ul>



#### 4.7.5 OPTION – configuring options

If no option is installed or is not yet configured, N . A . appears in the display.














<b>Eth.NET</b>  IP.AddrS SUBNET GATEWAY	Configuration of the Ethernet interface <ul style="list-style-type: none"> <li>• Enter IP address</li> <li>• Enter Subnet address</li> <li>• Enter Gateway address</li> </ul>
<b>WLAN</b>  IP.AddrS SUBNET GATEWAY SIGNAL	Configuration of the WLAN interface <ul style="list-style-type: none"> <li>• Enter IP address</li> <li>• Enter subnet address</li> <li>• Enter gateway address</li> <li>• SIG ... shows the signal strength of the WLAN connection as a percentage value.            0 to 25      very weak            26 to 49    weak            50 to 74    good            75 to 100   excellent            Reliable operation requires at least a good signal strength.</li> </ul>
<b>USB</b>  USB tEST	Configuration of the USB interface <ul style="list-style-type: none"> <li>• Test of the USB interface. After the test has been passed, rEAdY appears in the display.</li> </ul>
<b>digital</b>  IN 0 ... 3 OFF ZErO tArE Print UNIt rECALL SAVE tArGEt Arr.rIG Arr.UP Arr.DOWN StArt	Configuration of the digital inputs/outputs Configuring inputs 0 ... 3 <ul style="list-style-type: none"> <li>• Input not assigned</li> <li>• Key </li> <li>• Key </li> <li>• Key </li> <li>• Key </li> <li>• Key  , short keypress</li> <li>• Key  , long keypress</li> <li>• Key </li> <li>• Key </li> <li>• Key </li> <li>• Key </li> <li>• External key to start the filling application</li> </ul>

OUT 0 ... 3	Configuring outputs 0 ... 3
OFF	• Output not assigned
StAbLE	• Stable weight value
tArE	• Tare value
bEL.Min	• Value below minimum weight
AbV.Min	• Minimum weight reached or exceeded
UNdErLd	• Underload
OVErLd	• Overload
StAr	• Modified/calculated value
SP.tOL-	• Switching point on, until SP.tOL- is reached (or exceeded)
SP.tOL--	• Switching point on, until SP.tOL-- is reached (or exceeded)
tOL-	• Value below tolerance
GOOd	• Weight within the tolerance
tArGEt	• Target weight
tOL+	• Tolerance value exceeded

#### 4.7.6 DEF.PRN – configuring templates

<b>tEMPLt1/tEMPLt2</b>	Selecting Template 1 or Template 2
LINE 1 ... 12	Selecting line
NOt.USEd	• Line not used
HEAdEr	• Line as header. The contents of the header must be defined via an interface command, see Section 5.1.
GrOSS	• Gross weight
tArE	• Tare weight
nEt	• Net weight
tOL-	• Lower tolerance value
tOL+	• Upper tolerance value
tOL.tYPE	• Tolerance mode
StArLN	• Line with ***
CrLF	• Line feed (blank line)
F.FEEd	• Page feed

## 4.8 Diagnosis and printing out of the menu settings (DIAGNOS)

<p><b>tEst SC</b></p> <p>External</p>	<p>Testing the scale</p> <p>This menu item is only displayed at scales with an analog scale interface.</p> <p>Testing scale with external calibration weight</p> <ol style="list-style-type: none"> <li>1. The scale checks the zero point. -0- appears in the display. The test weight flashes in the display.</li> <li>2. If necessary, change the weight value displayed with .</li> <li>3. Put the calibration weight on the scale and confirm with .</li> <li>4. The scale checks the calibration weight put on them.</li> <li>5. After the test is completed, the deviation from the last calibration briefly appears in the display, ideally *d=0.0g, after which the scale changes to the next menu item KboArđ.</li> </ol>
<p><b>KboArđ</b></p> <p>PUSH 1 ... 10</p>	<p>Keyboard test</p> <ul style="list-style-type: none"> <li>• First press the large keys on the bottom row in order:     </li> <li>• Then press the smaller keys in the top row:      </li> </ul> <p>If the key works, the scale changes to the next key.</p> <p><b>Note</b></p> <p>You cannot abort the keyboard test!</p> <p>If you have selected the menu item KboArđ, you must press all keys.</p>
<p><b>dISPLAY</b></p>	<p>Display test: The scale displays all functioning segments</p>
<p><b>SNr</b></p>	<p>Display of the serial number</p>
<p><b>LISt</b></p>	<p>Printout of a list of all menu settings</p>
<p><b>LISt.M</b></p>	<p>Printout of a list of all values and settings in the memory</p>
<p><b>rESet.AL</b></p> <p>SUrE?</p>	<p>Resetting all menu settings to the factory settings</p> <p>Confirmation inquiry</p> <ul style="list-style-type: none"> <li>• Reset all menu settings to the factory settings with .</li> <li>• Do not reset the menu settings with .</li> </ul>

## 5 Interface description

### 5.1 SICS interface commands

The device supports the command set MT-SICS (METTLER TOLEDO **Standard Interface Command Set**). With SICS commands, it is possible to configure, query and operate the scales from a PC. SICS commands are divided up into various levels.

#### 5.1.1 Available SICS commands

	Command	Meaning
<b>LEVEL 0</b>	@	Reset the scale
	I0	Inquiry of all available SICS commands
	I1	Inquiry of SICS level and SICS versions
	I2	Inquiry of scale data
	I3	Inquiry of scale software version
	I4	Inquiry of serial number
	I6	Inquiry of weighing parameters
	S	Send stable weight value
	SI	Send weight value immediately
	SIR	Send weight value repeatedly
	Z	Zero the scale
	ZI	Zero immediately
<b>LEVEL 1</b>	D	Write text into display
	DW	Weight display
	K	Keyboard check
	SR	Send and repeat stable weight value
	T	Tare
	TA	Tare value
	TAC	Clear tare
	TI	Tare immediately

In the case of Levels 0 and 1, these are commands which, if implemented, will function identically with all METTLER TOLEDO scales or weighing terminals.

In addition there are also further interface commands which apply either to the entire product series or to the particular application level. This and further information on the MT-SICS command set may be found in the MT-SICS Manual (Order Number 22 011 459 or at [www.mt.com](http://www.mt.com)) or be obtained by request from your METTLER TOLEDO customer service representative.

### 5.1.2 Requirements for communication between scale and PC

- The scale must be connected to the RS232, RS485, USB or Ethernet interface of a PC with a suitable cable.
- The interface of the scale must be set to "Dialog" mode, see Section 4.6.1.
- A terminal program must be available on the PC, e.g. HyperTerminal.
- The communication parameters baud rate and parity must be set in the terminal program and on the scale to the same values, see Section 4.6.3.

### 5.1.3 Notes on network operation via the optional interface RS422/485

Up to 32 scales can be networked with the optional RS422/485 interface. In network operation, the scales must be addressed from the computer before commands can be sent and weighing results received.

Address	Hex	ASCII
0	0x30	0
1	0x31	1
2	0x32	2
...	...	...
9	0x39	9
10	0x3A	:
11	0x3B	;
...	...	...
31	0x4F	O

Description of the steps	Host	Direction	Scale
1. Host addresses the scale, e.g. with the address 3A hex.	<ESC> :	—>	
2. Host sends a SICS command, e.g. SI	SI <CRLF>	—>	
3. The scale confirms receipt of the command and sends the address back		<—	<ESC>:
4. The scale responds to the command and returns control of the bus to the host		<—	S_S__45.02_kg <CRLF>

## 5.2 TOLEDO Continuous mode

### 5.2.1 TOLEDO Continuous commands

In TOLEDO Continuous mode the scale supports the following input commands:

Command	Meaning
<b>P</b>	Printing out the current result
<b>T</b>	Taring of the scale
<b>Z</b>	Zero setting of the display
<b>C</b>	Deleting of the current value

### 5.2.2 Output format in TOLEDO Continuous mode

Weight values are always transferred in TOLEDO Continuous mode in the following format:

1	Status			Field 1						Field 2						17	18
	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16		
STX	SWA	SWB	SWC	MSD	-	-	-	-	LSD	MSD	-	-	-	-	LSD	CR	CHK
Field 1	Cont-Wt: 6 digits for the weight value that is transferred without comma and unit																
Field 2	Cont-Wt: 6 digits for the tare weight that is transferred without comma and unit																
STX	ASCII character 02 hex, character for "start of text"																
SWA, SWB, SWC	Status words A, B, C, see below																
MSD	Most significant digit																
LSD	Least significant digit																
CR	Carriage Return, ASCII character 0D hex																
CHK	Checksum (2-complement of the binary sum of the 7 lower bits of all the characters sent beforehand incl. STX and CR)																

Status word A								
Function	Selection	Status bit						
		6	5	4	3	2	1	0
Decimal position	X00	0	1			0	0	0
	X0							
	X							
	0.X							
	0.0X							
	0.00X							
	0.000X							
	0.0000X							
Numerical increment	X1			0	1			
	X2			1	0			
	X5			1	1			

Status word B	
Function/Value	Bit
Gross/Net: Net = 1	0
Sign: Negative = 1	1
Overload/Underload = 1	2
Movement = 1	3
lb/kg: kg = 1	4
1	5
Power up = 1	6

Status word C				
Function/Value				Bit
kg/lb	g	t	oz	
0	1	0	1	0
0	0	1	1	1
0	0	0	0	2
Print request = 1				3
Extended = 1				4
1				5
Tare manually, only kg = 1				6

### 5.3 MMR interface commands

The device supports the command set MMR (**METT**LER **MultiR**ange). This command set is compatible to the weighing terminals ID1 and ID3. For new installations we recommend the SICS command set, refer to Section 5.1.

#### 5.3.1 Available MMR commands

Com- mand	Meaning
AR	Read application block
AW	Write application block
D	Describe display
RO	Switch on the keyboard
R1	Switch off the keyboard
S	Transmit stable weight value
SI	Transmit weight value immediately
SIR	Transmit weight value immediately and repeat
SR	Transmit stable weight value and repeat
SX	Transmit stable data record
SXI	Transmit data record immediately
SXIR	Transmit data record immediately and repeat
T	Taring
U	Switch over weight unit
Z	Setting to zero



### 5.3.2 Syntax and formats

Commands have to be entered as ASCII characters and completed with C<sub>RLF</sub>.

The following ASCII characters are available: 20 hex/32 dec ... 7F hex/127 dec.

#### Command format when transmitting weight values

Identification	_	Weight value	_	Unit	Limit
String of characters for specification of command (1 ... 4 characters)	Blank	1 ... 8 digits, Number of digits variable	Blank	1 ... 3 characters, Number of characters variable	C <sub>RLF</sub>

#### Response format when transmitting weight values

Identification	_	Weight value	_	Unit	Limit
String of characters for specification of the response (2 ... 3 characters)	Blank	10 digits, right-justified, fill with blanks	Blank	3 characters, left-justified, fill with blanks	C <sub>RLF</sub>

#### Example

**Tare specification command**    T\_13.295\_kg

**Tare specification response**    TBH\_ \_ \_ \_ 13.295\_kg\_

### 5.3.3 Error messages

Error messages consist of 2 characters and the delimiter C<sub>RLF</sub>.

Error message	Meaning	Description
ET	Transmission error	Error in the received bit sequence, e.g. parity error, missing stop bit
ES	Syntax error	The received character string cannot be processed, e.g. command does not exist
EL	Logic error	Command cannot be executed, command is not supported on this application level

### 5.3.4 Available application blocks

The device disposes of the following application blocks. The numbers of application blocks that can be written are printed in **bold**.

<b>No.</b>	<b>Content</b>
002	Current program number
003	<STX>
004	<ETX>
006	<CR><LF>
007	Gross, 2nd unit
008	Net, 2nd unit
009	Tare, 2nd unit
011	Gross, 1st unit
012	Net, 1st unit
<b>013</b>	Tare, 1st unit
014	Display contents
018	Difference
019	Percent
<b>020</b>	Setpoint – Upper tolerance – Lower tolerance – Starting point (current values)
021	Start value
<b>026 to 050</b>	Setpoint – Upper tolerance – Lower tolerance – for memory 1 ... 25

## 6 Event and error messages

Error	Cause	Remedy
Display dark	<ul style="list-style-type: none"> <li>• Back lighting set too dark</li> <li>• No mains voltage</li> <li>• Unit switched off</li> <li>• Mains cable not plugged in</li> <li>• Brief fault</li> </ul>	<ul style="list-style-type: none"> <li>→ Set back lighting (b.LIGHT) brighter</li> <li>→ Check mains</li> <li>→ Switch on unit</li> <li>→ Plug in mains plug</li> <li>→ Switch device off and back on again</li> </ul>
Insufficient load L _ _ _ _ J	<ul style="list-style-type: none"> <li>• Load plate not on the scale</li> <li>• Weighing range not reached</li> </ul>	<ul style="list-style-type: none"> <li>→ Place load plate on the scale</li> <li>→ Set to zero</li> </ul>
Overload r _ _ _ _ 7	<ul style="list-style-type: none"> <li>• Weighing range exceeded</li> </ul>	<ul style="list-style-type: none"> <li>→ Unload scale</li> <li>→ Reduce preload</li> </ul>
_ _ _ _ _	<ul style="list-style-type: none"> <li>• Result not yet stable</li> </ul>	<ul style="list-style-type: none"> <li>→</li> <li>→ If necessary, adjust vibration adapter</li> </ul>
_ _ n o _ _	<ul style="list-style-type: none"> <li>• Function not permissible</li> </ul>	<ul style="list-style-type: none"> <li>→ Unload scale and set to zero</li> </ul>
r _ _ n o _ 7 L _ _ n o _ J	<ul style="list-style-type: none"> <li>• Zeroing not possible with overload or insufficient load</li> </ul>	<ul style="list-style-type: none"> <li>→ Unload scale</li> </ul>
Err 6	<ul style="list-style-type: none"> <li>• No calibration</li> </ul>	<ul style="list-style-type: none"> <li>→ Unplug the mains plug then plug it back in; switch unit off and then back on in battery mode</li> <li>→ Calibrate scale</li> <li>→ Call METTLER TOLEDO Service</li> </ul>
Err 14	<ul style="list-style-type: none"> <li>• Impermissible target value or impermissible tolerance</li> </ul>	<ul style="list-style-type: none"> <li>→ Repeat input with permissible values</li> </ul>
Err 17	<ul style="list-style-type: none"> <li>• Printout not yet ended</li> </ul>	<ul style="list-style-type: none"> <li>→ End printout</li> <li>→ Repeat required action</li> </ul>
Err 30	<ul style="list-style-type: none"> <li>• No IDNet scale found</li> </ul>	<ul style="list-style-type: none"> <li>→ Check connectors and cabling</li> <li>→ Call METTLER TOLEDO service</li> </ul>

Error	Cause	Remedy
Err 31	<ul style="list-style-type: none"> <li>• Data communication with IDNet scale faulty</li> </ul>	<ul style="list-style-type: none"> <li>→ Remove and plug the power plug back in. In case of battery operation switch the device off and on again</li> <li>→ Call METTLER TOLEDO service</li> </ul>
Err 32	<ul style="list-style-type: none"> <li>• Restart error</li> </ul>	<ul style="list-style-type: none"> <li>→ Remove and plug the power plug back in. In case of battery operation switch the device off and on again</li> <li>→ Call METTLER TOLEDO service</li> </ul>
Err 33	<ul style="list-style-type: none"> <li>• Weighing error</li> </ul>	<ul style="list-style-type: none"> <li>→ Remove and plug the power plug back in. In case of battery operation switch the device off and on again</li> <li>→ Call METTLER TOLEDO service</li> </ul>
Err 53	<ul style="list-style-type: none"> <li>• EAROM checksum error</li> </ul>	<ul style="list-style-type: none"> <li>→ Unplug the mains plug then plug it back in; switch unit off and then back on in battery mode</li> <li>→ Call METTLER TOLEDO Service</li> </ul>
Weight display unstable	<ul style="list-style-type: none"> <li>• Restless installation location</li> <li>• Draft</li> <li>• Contact between weighing pan and/or weighing sample and surroundings</li> <li>• Mains fault</li> </ul>	<ul style="list-style-type: none"> <li>→ Adjust vibration adapter</li> <li>→ Avoid drafts</li> <li>→ Remedy contact</li> <li>→ Check mains</li> </ul>
Incorrect weight display	<ul style="list-style-type: none"> <li>• Incorrect zeroing</li> <li>• Incorrect tare value</li> <li>• Contact between weighing pan and/or weighing sample and surroundings</li> <li>• Scale tilted</li> </ul>	<ul style="list-style-type: none"> <li>→ Unload scale, set to zero and repeat weighing operation</li> <li>→ Clear tare</li> <li>→ Remedy contact</li> <li>→ Level scale</li> </ul>

## 7 Technical data and accessories

### 7.1 Technical data

#### 7.1.1 General data

<b>IND439check / IND439xx check / BBA439check</b>	
Applications	<ul style="list-style-type: none"> <li>• Weighing</li> <li>• Check weighing               <ul style="list-style-type: none"> <li>– Support through different colored background lighting of the display</li> <li>– Tolerance mode "Absolute", "Relative" and "Percentage" can be selected</li> <li>– Numerical specification of target values</li> <li>– 99 memory slots for target values</li> <li>– Fixed tolerances can be selected</li> <li>– Check weighing to zero</li> </ul> </li> </ul>
Settings	<ul style="list-style-type: none"> <li>• Resolution can be selected</li> <li>• Weighing unit can be selected: g, kg, oz, lb, t</li> <li>• Taring function: Manual, automatic, next tare</li> <li>• Automatic zero compensation mode during switching on and during operation</li> <li>• Filter for adapting to the environmental conditions (vibration adapter)</li> <li>• Filter for adapting to the weighing mode, e.g. dispensing (weighing process adapter)</li> <li>• Switch-off function, sleep mode for power-operated devices, energy saving mode for storage battery operation</li> <li>• Display illumination</li> <li>• Graphics display of the weighing range</li> </ul>
Display	<ul style="list-style-type: none"> <li>• LCD liquid crystal display, digit height 21 mm, colored background lighting</li> </ul>
Keyboard	<ul style="list-style-type: none"> <li>• Tactile-touch membrane keypad</li> <li>• Scratch-resistant labelling</li> </ul>
Housing	<ul style="list-style-type: none"> <li>• Stainless steel 1.4301 or AISI 304</li> <li>• For dimensions, see Page 56</li> </ul>

<b>IND439check / IND439xx check / BBA439check</b>	
Net weight	<ul style="list-style-type: none"> <li>• IND439check/IND439xx check with AC power supply unit approx. 2.2 kg</li> <li>• IND439check/IND439xx check with storage battery approx. 2.8 kg</li> <li>• BBA439check-A with AC power supply unit approx. 9.0 kg</li> <li>• BBA439check-A with storage battery approx. 9.6 kg</li> <li>• BBA439check-BB with AC power supply unit approx. 12.1 kg</li> <li>• BBA439check-BB with storage battery approx. 12.7 kg</li> </ul>
Protection type (DIN 40050)	<ul style="list-style-type: none"> <li>• IP69K</li> </ul>
Mains connection	<p>Direct connection to power supply (supply voltage fluctuation not exceeding <math>\pm 10\%</math> of the rated voltage)</p> <ul style="list-style-type: none"> <li>• IND439check weighing terminal: Rated voltage 100 ... 240 VAC / 47 ... 63 Hz / 300 mA</li> <li>• IND439xx check weighing terminal: Rated voltage 230 VAC <math>\pm 10\%</math> / 47 ... 63 Hz / 300 mA</li> <li>• BBA439check compact scale Rated voltage 100 ... 240 VAC / 47 ... 63 Hz / 300 mA</li> </ul>
Storage battery operation	<p>Supply at device: 24 VDC / 1.0 A</p> <p>If the supply voltage is interrupted, the scale switches automatically over to storage battery operation</p> <p>For operating life, see Section 7.1.2.</p>
Ignition protection type IND439xx check (to IEC 60079-15)	<ul style="list-style-type: none"> <li>• Hazardous area Zone 2: Device category II 3G EEx nA II T4, Temperature range <math>-10\text{ }^{\circ}\text{C}</math> ... <math>+40\text{ }^{\circ}\text{C}</math> / <math>14\text{ }^{\circ}\text{F}</math> ... <math>104\text{ }^{\circ}\text{F}</math></li> <li>• Hazardous area Zone 22: Device category II 3D IP66 T 70°C</li> </ul>

<b>IND439check / IND439xx check / BBA439check</b>		
Ambient conditions	<ul style="list-style-type: none"> <li>• Application</li> <li>• Height</li> <li>• Temperature range Class III</li> <li>• Temperature range Class II</li> <li>• Installation/overvoltage category</li> <li>• Pollution degree</li> <li>• Relative humidity</li> </ul>	in interiors up to 2,000 m -10 ... +40 °C /14 ... 104 °F 0 ... +40 °C /32 ... 104 °F II 2 up to max. 80 %, non-condensing
Interfaces	<ul style="list-style-type: none"> <li>• 1 RS232 interface integrated</li> <li>• 1 further optional interface possible</li> </ul>	
Technical data for analog scales	For technical data of the analog scales to be connected to IND439check / IND439xx check please refer to the "IND4x9 / BBA4x9" installation instructions. For technical data of the weighing platform used at BBA439check please refer to the PBA430 operating instructions.	

### 7.1.2 Operating life with storage battery


The operating life during storage battery operation differs depending on the intensity of use, the configuration and the connected scale.

The following approximate values apply with standard RS232 interface and a color setting with R+G+B=7:

Scale	Conditions	Duration
Scale with 1 DMS weighing cell (e.g. BBA439check)	10 % operating time 90 % power-off mode	120 h
	Continuous operation	12 h
Scale with 4 DMS weighing cells	10% operating time 90% power-off mode	90 h
	Continuous operation	9 h
K line	10% operating time 90% power-off mode	70 h
	Continuous operation	7 h


Any additional optional equipment reduces the operating life correspondingly.

**7.1.3 IND439check / IND439xx check weighing terminal dimensions**

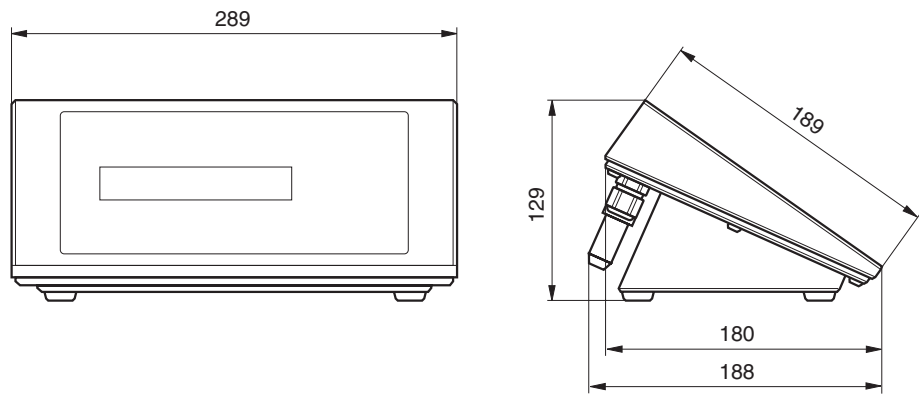

Dimensions in mm

**7.1.4 BBA439check compact scale dimensions**

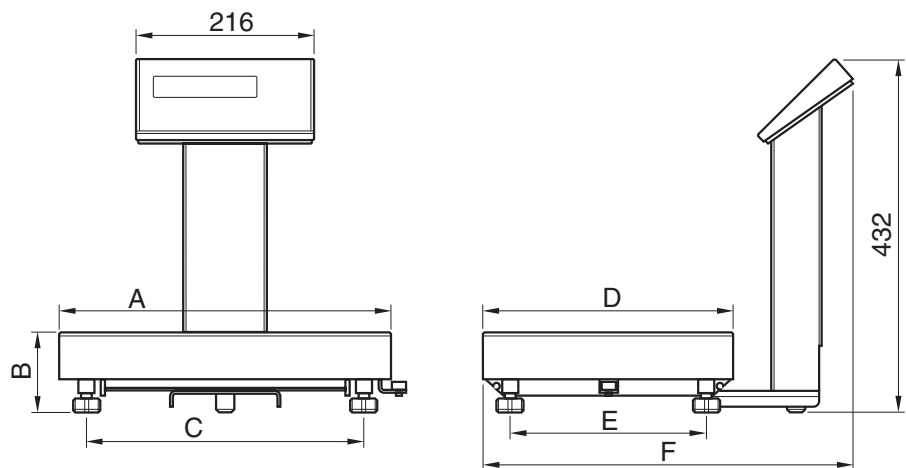

Dimensions in mm

Model	A	B	C	D	E	F
BBA439check-A...	300	102.5	235	240	175	380
BBA439check-BB	400	104.5	335	300	235	450



### 7.1.5 Interface connections

The device can be equipped with a maximum of 2 communication interfaces. The following combinations are possible:

	COM1	COM2
Standard	RS232	–
Standard + RS232	RS232	RS232
Standard + RS422/485	RS422/485	RS232
Standard + Ethernet	RS232	Ethernet
Standard + USB	RS232	USB
Standard + Digital I/O	RS232	Digital I/O
Standard + WLAN	RS232	WLAN

## 7.2 Accessories



Designation	Order number
GA46 thermal printer, RS232, 2.5 m cable and connector incl., not for a hazardous area	00 505 471
GA46 thermal printer, RS232, 0.4 m cable and connector incl., not for a hazardous area	00 507 229
GA46-W thermal printer, take-up device/protective hood, RS232, 2.5 m cable and connector incl., not for a hazardous area	00 505 799
GA46-W thermal printer, take-up device/protective hood, RS232, 0.4 m cable and connector incl., not for a hazardous area	00 507 230
Secondary display ADI419 (display without background lighting, stainless steel, IP69K, RS232, 3 m cable incl.), not for a hazardous area	22 013 962
Secondary display ADI419-B (display with background lighting, stainless steel, IP69K, RS232, 3 m cable incl.), not for a hazardous area	22 014 022
RS232 cable for SICS second scale (3 m, 8 pin <-> 9 pin Sub D connector)	22 006 795
RS232 cable for PC (3 m, 8 pin <-> 9 pin Sub D socket)	00 504 376
RS232 mating plug, 8 pin	00 503 756
RS422/RS485 cable (3 m, 6 pin <-> open ends)	00 204 933
RS422/RS485 mating plug, 6 pin	00 204 866
Ethernet 10/100 Base T twisted pair cable (5 m -> 8 pin RJ45)	00 205 247

Designation	Order number
Ethernet10/100 Base T twisted pair cable (20 m -> 8 pin RJ45)	00 208 152
USB adapter cable (0.2 m -> USB Series A socket)	22 006 268
USB adapter cable (3 m -> USB Series A socket)	22 007 713
Relay box for digital I/O option, not for a hazardous area	22 011 967
Connection cable Digital I/O option with relay box (10 m)	00 504 458
Digital I/O mating plug, 19 pin	00 504 461
Protective hood for IND4x9 terminals (set with 3 pieces) not for a hazardous area	22 013 963
Protective hood for BBA4x9 compact scales (set with 3 pieces)	22 013 992
Stand, stainless steel, for IND4x9 and PBA430, height 330 mm	22 013 964
Stand, stainless steel, for IND4x9 and PBA430, height 660 mm	22 013 965
Stand, stainless steel, for IND4x9 and KA, KB, MA, MB and DB weighing platforms	22 014 836
Bench stand, stainless steel, for IND4x9, suitable for mounting frame 503632 and 504854	22 014 835
Floor stand, stainless steel, for IND4x9	22 014 834
Stand base for floor stand	22 011 982
Wall adapter, stainless steel, for IND4x9, tiltable	22 013 966
Wall bracket, stainless steel, for IND4x9, rotatable and tiltable	22 014 833
GA46 mounting plate, stainless steel, for bench stand, floor stand and wall bracket	22 011 985
External storage battery for BBA4x9, stainless steel, IP69K (without charger)	22 013 988
Charger for version with internal or external storage battery (incl. power cable)	22 014 056

## 8 Appendix

### 8.1 Safety checks

The device has been tested by accredited inspection bodies. It has passed the safety checks listed below and carries the relevant test symbols. Production is subject to production monitoring by the inspection offices.

Country	Test symbol	Standard
Canada USA		CAN/CSA-C22.2 No. 1010.1-92 (für IND439check) CAN/CSA-C22.2 No. 1010.1-04 (für BBA439check) UL Std. No. 61010A-1
Other countries	<b>CB Scheme</b>	IEC/EN61010-1:2001
EU	<b>ATEX prototype test certificate</b> 	only for IND439xx check: EN 60079-15:2003 EN 50281-1-1:1998

### 8.2 Tests for utilisation in hygienically sensitive areas

Weighing terminal IND439check and compact scale BBA439check have been assessed by the EHEDG (European Hygienic Engineering and Design Group) and the NSF (National Sanitation Foundation).

Both institutes certify the fulfilment of the hygienic requirements for easy cleaning (Hygienic Design Criteria).

**EHEDG** The EHEDG is an association of device manufacturers, firms in the foodstuff industry, research institutes and health authorities. It was founded in 1989 with the aim of promoting the hygienically faultless manufacturing and packaging of foodstuffs. A positive expertise of the device by the EHEDG has taken place.

A corresponding report is available on the Internet under [www.mt.com](http://www.mt.com).

**NSF** NSF is an independent NGO founded in 1944 in the USA. Corresponding regulations were published for the use of devices in the foodstuff industry. The device fulfils the NSF criteria C-2 (Special Equipment and/or Devices) for use in the foodstuff industry.

The corresponding certificate is available on the Internet under [www.mt.com](http://www.mt.com).

### 8.3 Working to GMP (Good Manufacturing Practice)

Weighing terminal IND439check and compact scale BBA439check were evaluated by the Steinbeis-Transferinstitut Berlin with the following result:

**"The device is excellently suited for GMP working to EC-GMP Guideline Annex 15 and PIC/S Guideline PI 006-1."**

The evaluation encompasses the following points:

- Requirements for surfaces in the pharmaceutical production
- Ability to be cleaned
- Calibration
- Documentation with regard to qualification

The corresponding certificate is available on the Internet under [www.mt.com](http://www.mt.com).

### 8.4 Tables of geo values

For weighing instruments verified at the manufacturer's, the geo value indicates the country or geographical zone for which the instrument is verified. The geo value set in the instrument (e.g. "Geo 18") appears briefly after switch-on or is specified on a label.

Table **GEO VALUES 3000e** shows the geo values for European countries.

Table **GEO VALUES 6000e/7500e** shows the geo values for different gravitation zones.

#### 8.4.1 GEO VALUES 3000e, OIML Class III (European Countries)

Geographical latitude	Geo value	Country
46°22' – 49°01'	18	Austria
49°30' – 51°30'	21	Belgium
41°41' – 44°13'	16	Bulgaria
42°24' – 46°32'	18	Croatia
48°34' – 51°03'	20	Czechia
54°34' – 57°45'	23	Denmark
57°30' – 59°40'	24	Estonia
59°48' – 64°00'	25*	Finland
64°00' – 70°05'	26	
41°20' – 45°00'	17	France
45°00' – 51°00'	19*	
47°00' – 55°00'	20	Germany
34°48' – 41°45'	15	Greece
45°45' – 48°35'	19	Hungary

<b>Geographical latitude</b>	<b>Geo value</b>	<b>Country</b>
63°17' – 67°09'	26	Iceland
51°05' – 55°05'	22	Ireland
35°47' – 47°05'	17	Italy
55°30' – 58°04'	23	Latvia
47°03' – 47°14'	18	Liechtenstein
53°54' – 56°24'	22	Lithuania
49°27' – 50°11'	20	Luxemburg
50°46' – 53°32'	21	Netherlands
57°57' – 64°00'	24*	Norway
64°00' – 71°11'	26	
49°00' – 54°30'	21	Poland
36°58' – 42°10'	15	Portugal
43°37' – 48°15'	18	Romania
47°44' – 49°46'	19	Slovakia
45°26' – 46°35'	18	Slovenia
36°00' – 43°47'	15	Spain
55°20' – 62°00'	24*	Sweden
62°00' – 69°04'	26	
45°49' – 47°49'	18	Switzerland
35°51' – 42°06'	16	Turkey
49°00' – 55°00'	21*	United Kingdom
55°00' – 62°00'	23	

\* factory setting

**8.4.2 GEO VALUES 6000e/7500e OIML Class III (Height ≤1000 m)**

<b>Geographical latitude</b>	<b>Geo value</b>
00°00' – 12°44'	5
05°46' – 17°10'	6
12°44' – 20°45'	7
17°10' – 23°54'	8
20°45' – 26°45'	9
23°54' – 29°25'	10
26°45' – 31°56'	11
29°25' – 34°21'	12
31°56' – 36°41'	13
34°21' – 38°58'	14
36°41' – 41°12'	15
38°58' – 43°26'	16
41°12' – 45°38'	17
43°26' – 47°51'	18
45°38' – 50°06'	19
47°51' – 52°22'	20
50°06' – 54°41'	21
52°22' – 57°04'	22
54°41' – 59°32'	23
57°04' – 62°09'	24
59°32' – 64°55'	25
62°09' – 67°57'	26
64°55' – 71°21'	27
67°57' – 75°24'	28
71°21' – 80°56'	29
75°24' – 90°00'	30

## 8.5 FCC

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to both Part 15 of the FCC Rules and the radio interference regulations of the Canadian Department of Communications. These limits are designed to provide a reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the user manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Cet appareil a été testé et s'est avéré conforme aux limites prévues pour les appareils numériques de class A et à la partie 15 des règlements FCC et à la réglementation des radio-Interférences du Canadian Department of Communications. Ces limites sont destinées à fournir une protection adéquate contre les interférences néfastes lorsque l'appareil est utilisé dans un environnement commercial. Cet appareil génère, utilise et peut radier une énergie à fréquence radioélectrique; il est en outre susceptible d'engendrer des interférences avec les communications radio, s'il n'est pas installé et utilisé conformément aux instructions du mode d'emploi. L'utilisation de cet appareil dans les zones résidentielles peut causer interférences néfastes, auquel cas l'exploitant sera amené à prendre les dispositions utiles pour palier aux interférence à ses propres frais.

## 9 Index

- A**  
 Access protection ..... 36  
 Accessories ..... 57  
 Additional equipment ..... 8  
 Adjustment ..... 31  
 Ambient conditions ..... 55  
 Analog scale ..... 55  
 Applications ..... 53
- C**  
 Calibration ..... 31  
 Capacity utilisation ..... 17  
 Chain tare ..... 16  
 Check weighing ..... 23, 24, 35  
 Cleaning ..... 17  
 Compact scale ..... 8  
 Continuous mode ..... 46
- D**  
 Device overview ..... 9  
 Digital I/O ..... 41, 57  
 Dimensions ..... 56  
 Display ..... 10  
 Display accuracy ..... 31  
 Display precision ..... 33
- E**  
 Error messages ..... 51  
 Ethernet ..... 57  
 Explosion protected weighing terminals ..... 5  
 External power supply ... 8, 14, 58
- F**  
 Filter ..... 32, 34
- H**  
 Hygienically sensitive areas. 7, 17, 59
- I**  
 Ignition protection type ..... 54  
 Info key ..... 37  
 Interface commands  
   MMR ..... 48  
 Interface protocol ..... 46, 48  
 Interfaces  
   Configuring ..... 38  
   Connections ..... 8, 57
- K**  
 Keyboard ..... 11
- M**  
 Mains connection ..... 12, 13, 54  
 Menu  
   Application ..... 35  
   Communication ..... 38  
   Diagnosis ..... 43  
   Operation ..... 25  
   Overview ..... 27  
   Scale ..... 31, 33  
   Terminal ..... 37  
 Menu structure ..... 26
- O**  
 Operator menu ..... 25  
 Options ..... 41  
 Output options ..... 36
- P**  
 Password ..... 25  
 Power supply ..... 12, 13  
 Protocol ..... 17
- R**  
 Reset  
   Application ..... 37  
   Interface ..... 40  
   Scale ..... 32, 34  
   Terminal ..... 38  
 RS232 ..... 55, 57  
 RS422 ..... 57  
 RS422/RS485 ..... 45  
 RS485 ..... 57
- S**  
 Safety checks ..... 59  
 Safety instructions ..... 5  
 SICS commands ..... 44  
 Storage battery operation .... 13, 55  
 Supervisor menu ..... 25  
 Switching off ..... 15  
 Switching on ..... 15
- T**  
 Tare  
   Automatic ..... 16  
   Chain tare ..... 16  
   Clearing ..... 16  
 Target values  
   Specifying numerically ..... 21  
   Storing ..... 21  
   Weighing in ..... 19  
 Terminal settings ..... 37  
 TOLEDO Continuous ..... 46  
 Tolerance settings ..... 35
- U**  
 USB ..... 57
- V**  
 Verification ..... 14
- W**  
 Weighing terminal ..... 8  
 Weighing unit ..... 31, 33  
 WLAN ..... 41, 57
- Z**  
 Zeroing ..... 15





**nefton**  
Ζύγιση  
Σήμανση  
Συμμόρφωση

**Νεύτων Τεχνολογίες ΑΒΕΕ**

Γέρακα 113, Τ.Θ. 67934

15344 Γέρακας

Τηλ: 210 6654544

Fax: 210 6654545

marketing@nefton.gr

www.nefton.gr



**22015307A**

Subject to technical changes © Mettler-Toledo (Albstadt) GmbH 05/08 Printed in Germany 22015307A

**Mettler-Toledo (Albstadt) GmbH**

D-72458 Albstadt

Tel. ++49-7431-14 0, Fax ++49-7431-14 232

Internet: <http://www.mt.com>